 


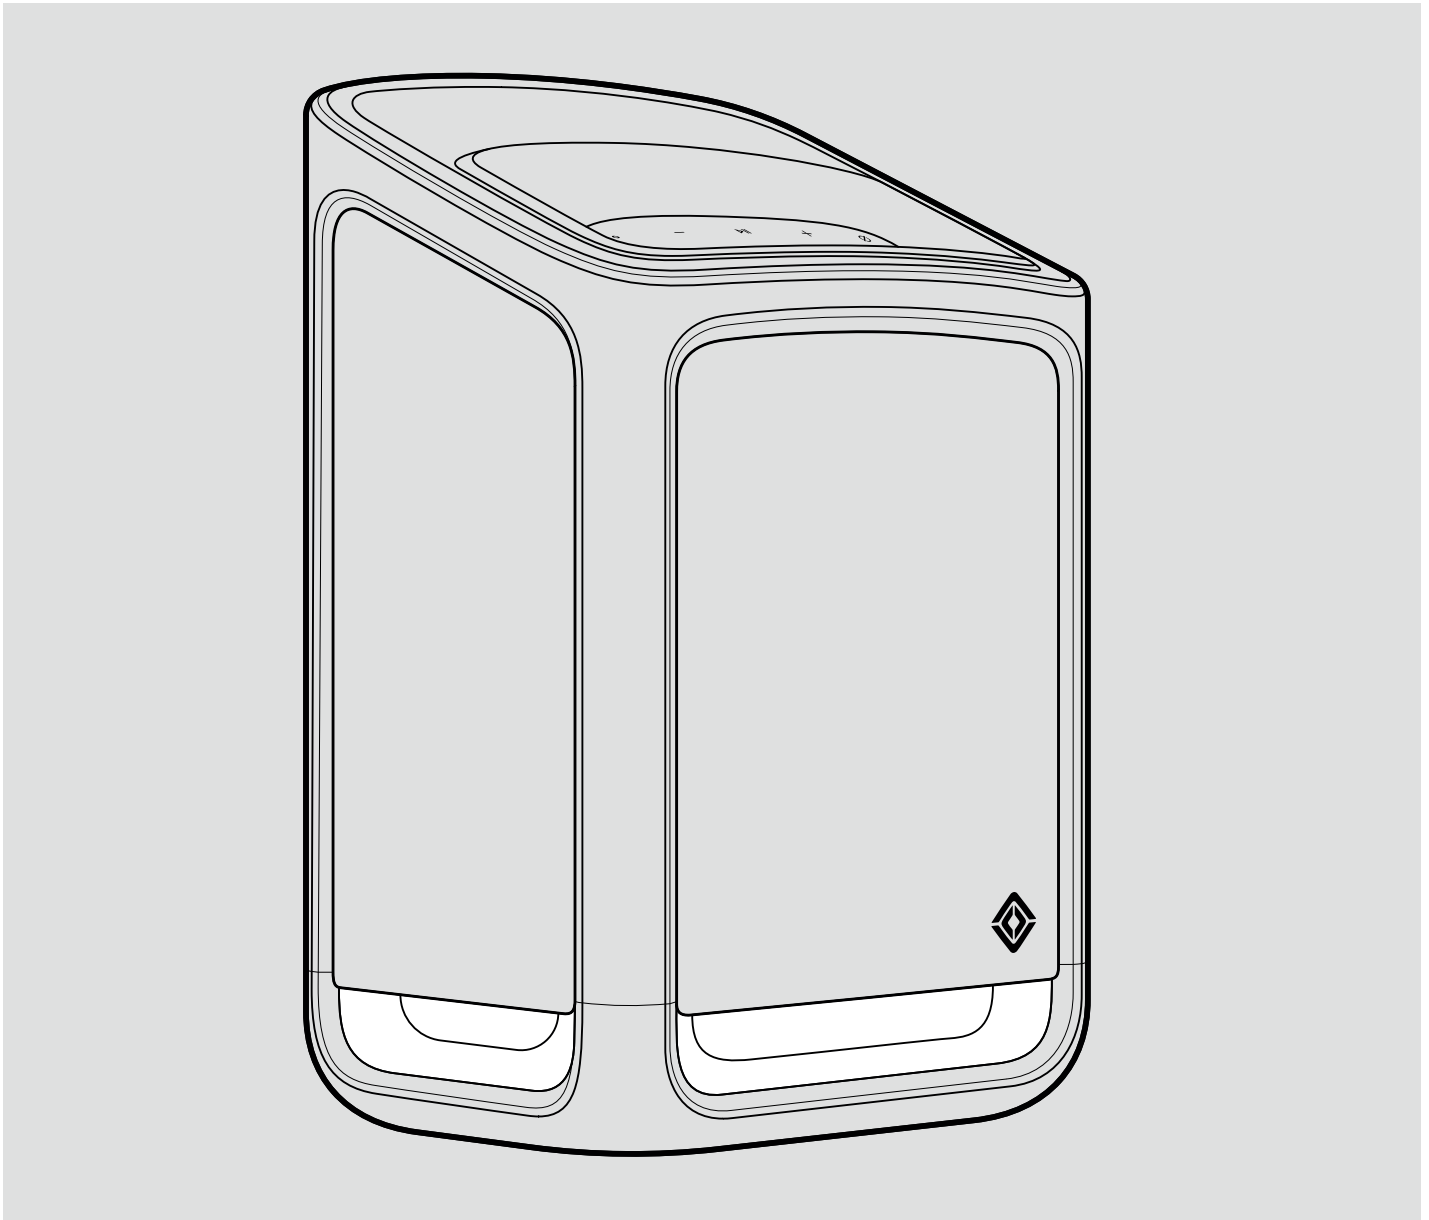

# Camp Speaker Guide



# RIVIAN

© 2025 Rivian Automotive, LLC. All rights reserved.

All information in this document and all Rivian software is subject to copyright and other intellectual property rights of Rivian Automotive, LLC, its affiliates, or its licensors. This material may not be modified, reproduced, or copied, in whole or in part, without the prior written permission of Rivian Automotive, LLC, its affiliates, or its licensors. Unless indicated otherwise, all trademarks are owned and registered by Rivian Automotive, LLC, its affiliates, or its licensors in the United States and/or other countries. Please visit <https://www.rivian.com/legal/brand> for Rivian's trademarks and service marks.

The images provided in this document are for illustrative purposes only. Depending on the product details and market region, the information in this document may appear slightly different from your product.

# Contents

<b>Important Safety Information</b> .....	<b>4</b>
<b>Overview</b> .....	<b>5</b>
Speaker Specifications .....	6
Get Started .....	6
Clean the Speaker .....	6
<b>Battery</b> .....	<b>7</b>
Check Charge Level .....	7
Charge the Speaker .....	7
Charge with USB-C .....	7
<b>Operation</b> .....	<b>8</b>
Buttons .....	8
Actions .....	8
Power States .....	10
Undock the Speaker .....	10
Dock the Speaker .....	10
Turn On the Speaker .....	10
Connect with Bluetooth .....	11
Use Low Bass Mode .....	11
Use the Lantern .....	11
<b>Reset the Speaker</b> .....	<b>12</b>
Hardware Reset .....	12
Factory Reset .....	12
<b>Troubleshooting</b> .....	<b>13</b>
<b>Legal</b> .....	<b>14</b>
Regulatory Information .....	14
Certificates and Conformity .....	15
Exposure to Radio Frequency .....	16
<b>Adventure Gear Limited Warranty</b> .....	<b>17</b>
<b>Customer Service</b> .....	<b>18</b>

# Important Safety Information



## DANGER

The rechargeable battery may explode if it is incorrectly replaced. [Contact Rivian](#) for battery replacement. The speaker forces a shutdown to protect the battery if the temperature falls outside the range of -4 to +140°F (-20 to +60°C).



## DANGER

- To reduce the risk of fire or electric shock, don't expose the speaker to a heavy rainstorm.
- Unplug attachments and accessories from the speaker during lightning storms and when you store the speaker for a long period of time.

- Read and keep these instructions.
- Heed all warnings and follow all instructions.
- Clean only with a soft, dry cloth. Household cleaners or solvents can damage the finish.
- Openings are for ventilation. To prevent damage caused by overheating, don't block openings.
- Don't install near heat sources such as radiators, heat registers, stoves, or other devices that produce heat.
- Avoid leaving the speaker in direct sunlight or near excessive heat. Don't leave the speaker on seats, on top of the center console, on the floor of the vehicle, or close to a campfire.



 
## CAUTION

Temperatures that exceed 185°F (85°C) can damage the speaker.

- The lantern light quickly flashes red before it shuts down to indicate that the speaker has become too hot or too cold.
- Only use attachments or accessories specified by the manufacturer, such as a USB-C cable.
- Cables plugged into the speaker shouldn't be pinched or knotted. Ensure that people can't walk or trip on the cables.
- Refer all service requests to qualified service personnel with Rivian. Service is required if the speaker doesn't function normally or it is damaged in any way, such as through exposure to spilled liquids, excessive rain, or moisture.

# Overview

The Camp Speaker is a portable speaker that charges and is stored in the Accessory Dock below the center console. It can also charge by USB-C with a high-power charger, be paired with *Bluetooth*® to play music, and be used as a lantern in various modes of brightness.

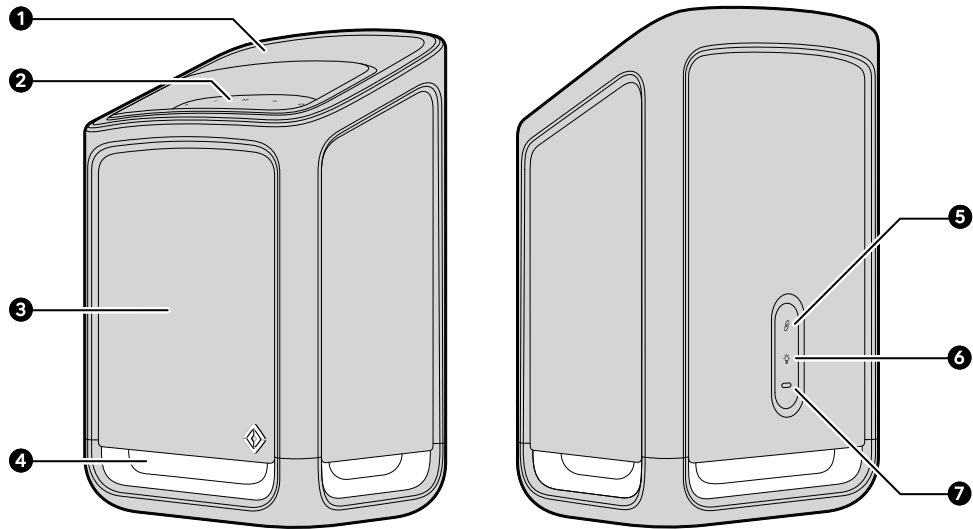

Item	Description
1	Handle
2	Audio controls
3	Fabric speaker covers
4	Lantern
5	Connect button
6	Lantern button
7	USB-C port




## Speaker Specifications

Item	Value
Model	RCS 0.9, 1.0
Dimensions (height x length x width)	9.9 in x 6.7 in x 5.1 in (252 mm x 170 mm x 128.5 mm)
Weight	5.7 lb (2.6 kg)
Battery capacity (minimum)	32 Watt hours
Charge time (maximum)	3 hours
Play time (minimum, audio only)	6.5 hours
Lantern (60% brightness)	3.5 hours
Input power	30 Watts
Input rating	Type C: DC 5 V / 9 V / 15 V / 20 V Pogo pin: DC 12 V
Output rating	Type C: DC 5 V / 2 A
Ambient temperature (operating)	32 to 104°F (0 to 40°C)
Safe storage temperature (non-operating)	Up to 185°F (85°C)

## Get Started

You can configure your vehicle with a Rivian Camp Speaker. The speaker docks in the Accessory Dock below the center console.

### IMPORTANT

The speaker needs to be fully charged before initial use. Undock the speaker and plug it into a power source. Use a USB-C cable with power delivery similar to a laptop charger instead of a phone charger for faster charging time. Check the charge level for a green light by pressing the **Lantern**  button twice.

## Clean the Speaker

To maintain the look and functionality of the speaker, occasionally inspect it for wear and tear through regular use. Wipe the speaker with a soft, dry cloth for surface stains.



### DANGER

Don't submerge the speaker in liquid. Don't use chemical cleaning agents to clean the speaker.

# Battery

## Check Charge Level

On the speaker, press the **Lantern**  button two times.

- Green: 75% to 100%
- Amber: 35% to 74%
- Red: 0% to 34%

## Charge the Speaker

When docked, the speaker automatically charges as you drive the vehicle. When undocked, the speaker can be charged when plugged into a USB-C source. The LED light above the USB-C connector at the rear of the speaker pulses to indicate when it charges. The LED light shows as solid white when the speaker is fully charged.

A warning audio tone plays when the battery power falls to 5% remaining. The speaker powers down on its own if it is not charged.

### NOTE

Normal operation will not work if the battery temperature falls outside allowed temperatures 32 to 104°F (0 to 40°C).

## Charge with USB-C

When the speaker is not docked, you can charge the speaker by connecting to a power source. Use a USB-C cable with power delivery similar to a laptop charger instead of a phone charger for faster charging time. Charging times may vary, but it takes between 3 hours (with power delivery) to 12 hours (without power delivery) to fully charge a depleted speaker.

# Operation

## Buttons





The control buttons at the top of the speaker appear when the speaker powers on.

### NOTE

There are also buttons at the back of the speaker.



## Actions

Icon	Color	Name	Result
	White (Off) Blue ( <i>Bluetooth</i> <sup>®</sup> On)	Connect ( <i>Bluetooth</i> <sup>®</sup> )	<ul style="list-style-type: none"><li>When the speaker turns on, hold down for 2 seconds to start or stop <i>Bluetooth</i><sup>®</sup> pairing. The icon blinks slowly while in pairing mode and stops blinking when pairing is complete.</li><li>Hold down for 30 seconds to perform a hardware reset.</li></ul>
	White	Lantern	<ul style="list-style-type: none"><li>If the speaker is in Standby mode, press to cycle the lantern through Low, Medium, High, and Off states.</li><li>When the lantern lights up, hold down for 2 seconds to turn off the lantern.</li></ul>
	White	Action	<ul style="list-style-type: none"><li>To reset the speaker, hold down for 3 seconds to turn it off completely. Then hold down for 3 seconds to power it back on.</li></ul>
	White	Volume -	<ul style="list-style-type: none"><li>Press to decrease audio volume in single increments.</li><li>Hold down to accelerate decreasing the audio volume.</li></ul>



Icon	Color	Name	Result
	White	Play/Pause	<ul style="list-style-type: none"> <li>• Press to toggle between playing and pausing audio.</li> <li>• Press 2 times to skip to the next track.</li> <li>• Press 3 times to go back to the previous track.</li> <li>• Hold down for 7 seconds to put the speaker in Standby mode.</li> </ul>
	White	Volume +	<ul style="list-style-type: none"> <li>• Press to increase audio volume in single increments.</li> <li>• Hold down to accelerate increasing the audio volume.</li> </ul>
	White (Off) Red (Muted)	Mic Mute	<ul style="list-style-type: none"> <li>• Press to toggle between muting and un-muting the microphone.</li> </ul>
		Play Next*	<ul style="list-style-type: none"> <li>• Press to skip to the next song or to the next radio station.</li> <li>• Hold down to fast-forward through the current song or skip to the next radio station.</li> </ul>
		Play Previous*	<ul style="list-style-type: none"> <li>• Press to go back to the start of the current song or to the previous radio station.</li> <li>• Press continuously to skip to prior songs or to prior radio stations.</li> <li>• Hold down to rewind through the current song or skip to the previous radio station.</li> </ul>

\* Handled on the device playing content, not on the speaker.



**WARNING**


Playing the sound system at high volumes can cause hearing damage.



## Power States

Mode	State	Behavior
Off	Not connected	Buttons are dark.
Standby	Connected to <i>Bluetooth</i> <sup>®</sup> battery-saving mode	Buttons are softly lit.
On	In use	Lantern is on. Music is playing.

## Undock the Speaker

The speaker unlocks once the vehicle is in **P** (Park), or when the vehicle unlocks. Pull the speaker straight out by the handle to remove it from its dock. You can also unlock or lock the speaker from its dock on the center display by going to **Settings**  > **Connect** > **Dock**.

### NOTE

To avoid damage to the latch, gently pull on a speaker after unlocking it from the dock. Don't pull the speaker too hard.



### CAUTION

Don't store items in the speaker's dock. This may damage the charging contacts within the dock.


## Dock the Speaker

The speaker powers down when it docks and begins to charge as the vehicle drives. Ensure that the speaker is properly latched in the dock.

### NOTE



The speaker locks in place when the vehicle is in motion.

## Turn On the Speaker

- If the speaker is on standby, press any button to wake it.
- If the speaker is off, hold down the **Action**  button for 3 seconds to wake it.



## Connect with Bluetooth

When the speaker isn't docked inside the vehicle, press the **Connect**  button for 2 seconds on the speaker to enter pairing mode, or manually connect to it from the *Bluetooth*<sup>®</sup> menu on your smartphone. The **Connect**  light blinks blue when pairing and becomes solid blue when connected. The speaker stays connected to that device until docked inside the vehicle or connected to another device.

If no *Bluetooth*<sup>®</sup> device is connected, the speaker searches for devices to pair with for 30 seconds.



After the speaker establishes a *Bluetooth*<sup>®</sup> connection, it remembers up to eight *Bluetooth*<sup>®</sup> devices. When you turn it on again, the speaker automatically searches for a known device that's available nearby.

### NOTE

The speaker supports *Bluetooth*<sup>®</sup> devices version 4.2 and up.


## Use Low Bass Mode

Low Bass Mode turns off lower-frequency bass for a quieter listening environment, such as for areas with designated quiet hours.

Press the **Volume**  and **Volume**  buttons simultaneously for 7 seconds to toggle Low Bass Mode on and off.

## Use the Lantern

The lantern is controlled by a button at the top of the bezel. Cycle through the lantern brightness with a series of short presses: 30%, 60%, 100%, 0% (off).

At any time, hold down the **Lantern**  button to max out the brightness to 100%.



### CAUTION

The Camp Speaker's lantern is not replaceable. When the lantern reaches its end of life, [contact Rivian](#) to replace your Camp Speaker.

# Reset the Speaker

## Hardware Reset

Perform a hardware reset when the speaker hangs and doesn't respond to button presses.

Hold down the **Connect**  button for 30 seconds to perform a hardware reset.

## Factory Reset

Perform a factory reset to completely reset the speaker to its initial state.

Hold down the **Action** , **Volume Down** , and **Play/Pause**  buttons simultaneously for 7 seconds to perform a factory reset.











### CAUTION

A factory reset erases data about device IDs, pairings, and preferences from the speaker's memory.

# Troubleshooting

If the speaker doesn't work as intended, refer to the following troubleshooting guide before you [contact Rivian](#).

If This Happens	Try This
Speaker doesn't turn on	<ul style="list-style-type: none"> <li>Remove the speaker from its dock. This triggers the speaker to turn on.</li> <li>Make sure the battery has enough charge.</li> <li>Charge the battery with a USB-C adapter for 3 hours.               <ul style="list-style-type: none"> <li>The USB-C light pulses white to indicate charging in progress.</li> <li>The USB-C light turns solid white to indicate a fully charged battery.</li> </ul> </li> <li>Hold down the <b>Connect</b>  button for 30 seconds to perform a hardware reset.</li> </ul>
No sound	<ul style="list-style-type: none"> <li>Press <b>Volume Up</b> .</li> <li>Make sure <a href="#">Bluetooth</a><sup>®</sup> connection has successfully paired.</li> <li>Make sure audio runs on the streaming source (phone or tablet).</li> <li>Hold down the <b>Action</b> , <b>Volume Down</b> , and <b>Play/Pause</b>  buttons simultaneously for 7 seconds to perform a factory reset.</li> </ul>
Weak signal	<ul style="list-style-type: none"> <li>Check if the device is within range for <a href="#">Bluetooth</a><sup>®</sup>: &lt;98 ft (&lt;30 m).</li> <li>Move the speaker closer to the device or network that it is connected to.</li> <li>If the speaker can't pair with the device once it's within range, choose the option to "forget the device," and then try again to pair the speaker to the device.</li> <li>Hold down the <b>Action</b> , <b>Volume Down</b> , and <b>Play/Pause</b>  buttons simultaneously for 7 seconds to perform a factory reset.</li> </ul>
"Speaker not fully docked" message appears	<ul style="list-style-type: none"> <li>Firmly push in the speaker to ensure that it is properly latched in the dock.</li> <li>If this message occurs frequently, remove the speaker from the dock and <a href="#">contact Rivian</a> to have the hardware inspected.</li> </ul>
Lantern doesn't work	<p><a href="#">Contact Rivian</a> for lantern repair.</p>

# Legal

## Regulatory Information

### FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. And, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:










- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

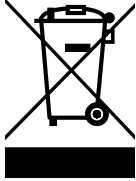

### CAUTION

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment.



	<p>This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health, and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or Rivian.</p>
	
	
	
	

## Certificates and Conformity

Camp Speaker	
Model	RCS 0.9, 1.0
FCC ID	Contains FCC ID: 2AOHH-TURBOXC404
IC ID	Contains IC: 23465-TURBOXC40X



## Exposure to Radio Frequency

Rivian vehicles use Wi-Fi®, *Bluetooth*®, and cellular radio (LTE/WCDMA/GSM) transmitters that emit radio frequency (RF) energy. Though these devices emit low levels of RF energy, keep a minimum distance from these devices to the human body during operation to meet the guidelines for RF exposure from the Federal Communications Commission of the United States (FCC), Industry Canada, and European Union.

The device emitting RF energy used in Rivian vehicles is listed below based on the recommended **Maximum Permissible Exposure (MPE)** distance.

Camp Speaker	
Model	RCS 0.9, 1.0
MPE Distance	8 in (20 cm)
Antenna Location	Center console*

\* Camp Speaker is removable from the vehicle's center console. The MPE distance should be from the Camp Speaker antenna, whether docked or undocked.

# Adventure Gear Limited Warranty

Refer to the *Adventure Gear Limited Warranty Guide* for warranty information.

# Customer Service

Still need help? Connect with us.

**RIVIAN**

## Customer Engagement Center

---

(888) RIVIAN1 / (888) 748-4261  
[rivian.com/support#contact](https://rivian.com/support#contact)