

Rivian R1S Tire Rotation

Go to Off Road mode and put the Rivian in the Highest setting

Go to Settings → Vehicle → Service and turn on “Tire Change” mode


Pop open the four puck covers – You may need a small screwdriver to pull down the front covers (the rear covers come down by just pushing on the side):



Put the magnetic jack pucks in place then line up the lift on those four pucks:



Rotate as shown:

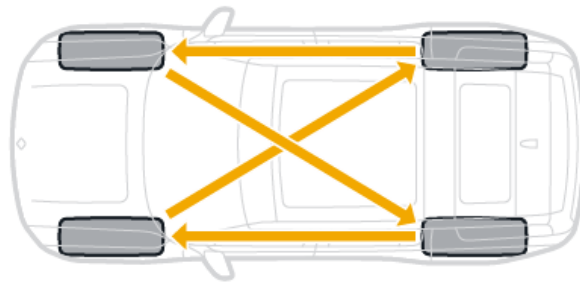

Torque the lug nuts to 190 Nm (140 Ft/Lbs)

Return the jack pucks to their carrying case

Push the puck covers back into place