


Rivian R1S Tire Rotation

Go to Off Road mode and put the Rivian in the Highest setting

Go to Settings → Vehicle → Service and turn on “Tire Change” mode

Use the magnetic pucks for the lift – You may need a small screwdriver to pull down the front covers (the rear covers come down by just pushing on the side)

Rotate as shown:

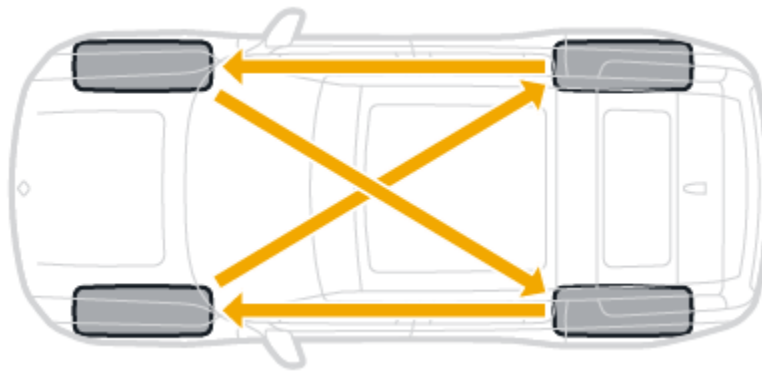

Torque the lug nuts to 190 Nm (140 Ft/Lbs)

Push the puck covers back into place